

## Linkage 433 401



### Application

If threaded onto the axle.

### Purpose

An elastic connection for the guiding the air suspension valve 464 006 ... or an ECAS distance sensor.

### Installation recommendation

- Use a flat iron to fasten the linkage on the vehicle axle.  
The  $\varnothing 6$  pipe for the connection between the two rubber sleeves (adjustment lever of the air suspension valve and the linkage) does not belong in the scope of delivery.

### Installation dimensions

