


Barring Adapter 3681612 For Single & Twin Cylinder Compressors

This kit contains one barring adapter, two cap screws and this instruction sheet.

Disassembly

- Remove the barring adapter bolts (two)
- Remove the barring adapter.

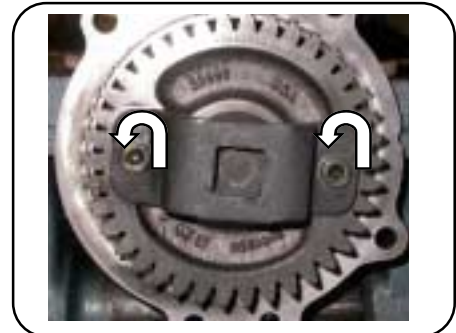

Assembly

- Clean the gear surface area and the screw holes. Avoid getting debris and solvent into the air compressor.
- Assemble the barring adapter using the two (2) M8 bolts (supplied) and torque to:

Torque Nm	Rotation Degrees
30 Nm +5 -0	30° +10° -0°

The new bolts come with thread lock already applied.

