

Basis for door bar distances of 200mm to 450mm


Scope of delivery: Article no. 10248 – Basis



Basis

Installation instructions:

Pull the lock apart:

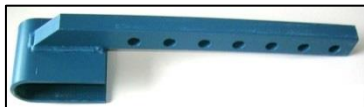

Left locking piece



Right locking piece

	Put the left locking piece around the left door bar with the clamps facing backwards.
	Put the right locking piece around the right door bar with the clamps facing backwards. Thereby push the bar of the left locking piece through the right locking piece.
	Push the parts as tightly as possible together, until they rest directly against the door bars.
	If applicable, the door gaskets have to be cut in, so that the parts can be pushed together close enough.
	For locking, use a MTL padlock 13mm (article no. 08000). Push the padlock shackle from the top through the Basis and lock it with the locking padlock piece.
	The clamps must clasp the door bars in a way that the doors cannot be opened anymore.

Maintenance:

Mechanical parts: maintenance-free

Damages to the paint have to be repaired as quickly as possible.

Clean and cylinder care:

Clean it with brake cleaner. Then a little light oil into the keyhole and dribble down the key a few times and rotate.

Oils that are suitable:

Sewing machine oil / Weapon oil / thin synthetic motor oil / **NEVER** Teflon